

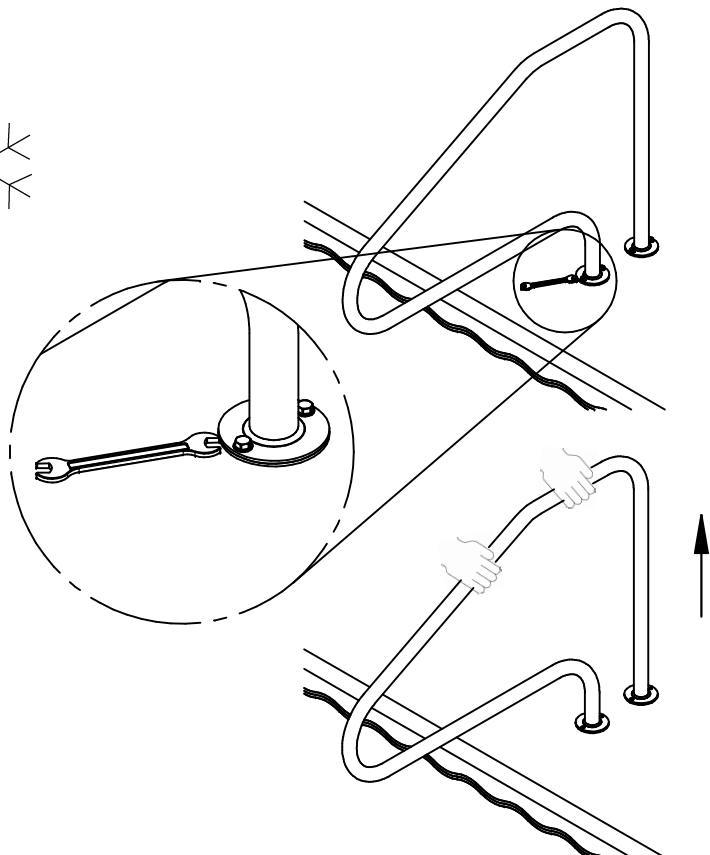
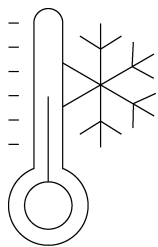


3

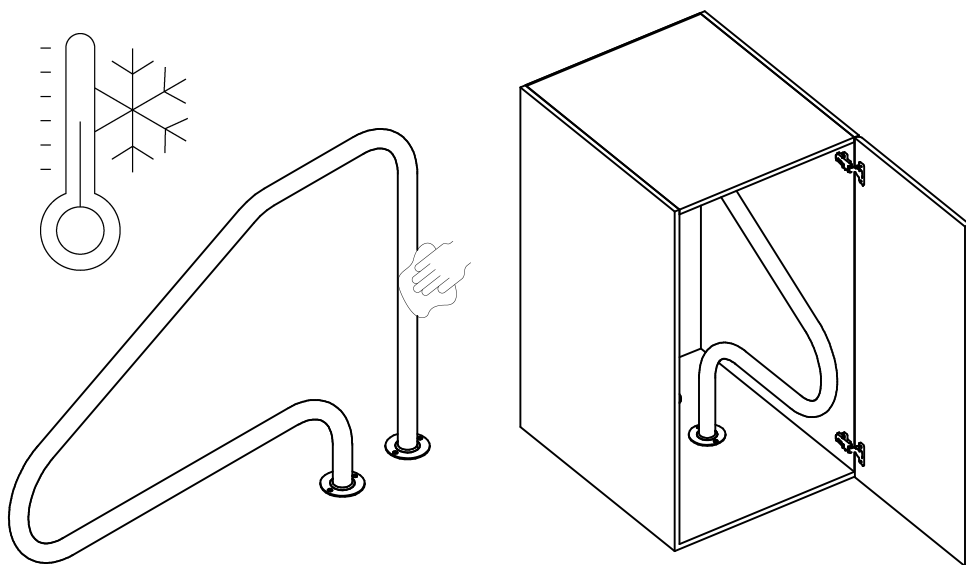

4

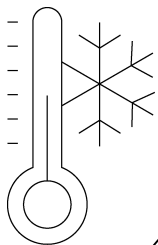

09940673









**INSTRUCCIONES DE MONTAJE**  
BARANDILLA FX - 01 / PLETINA SOLDADA

**ASSEMBLY INSTRUCTIONS**  
HANDRAILS FX - 01 / WELDED FLANGE


**INSTRUCTIONS DE MONTAGE**  
SORTIES DE BAIN FX - 01 / PLETINE SOUDÉE

**MONTAGEANLEITUNGEN**  
HALTEGRIFFE FX - 01 / GESCHWEIßTE FLANSCH



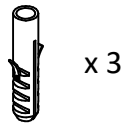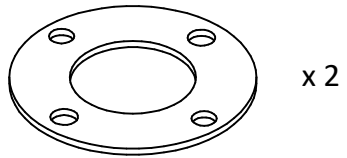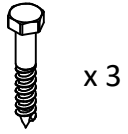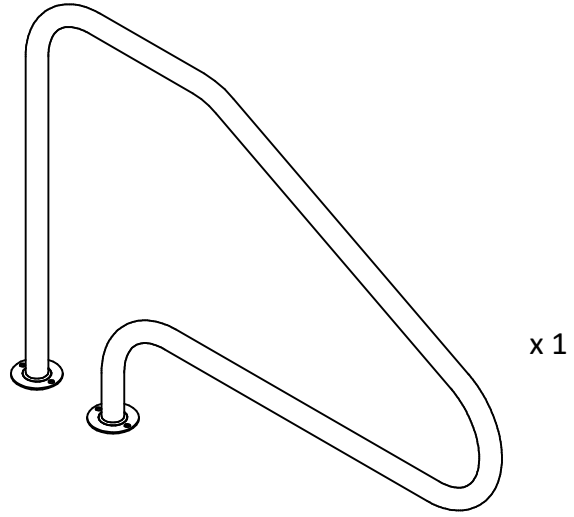

1

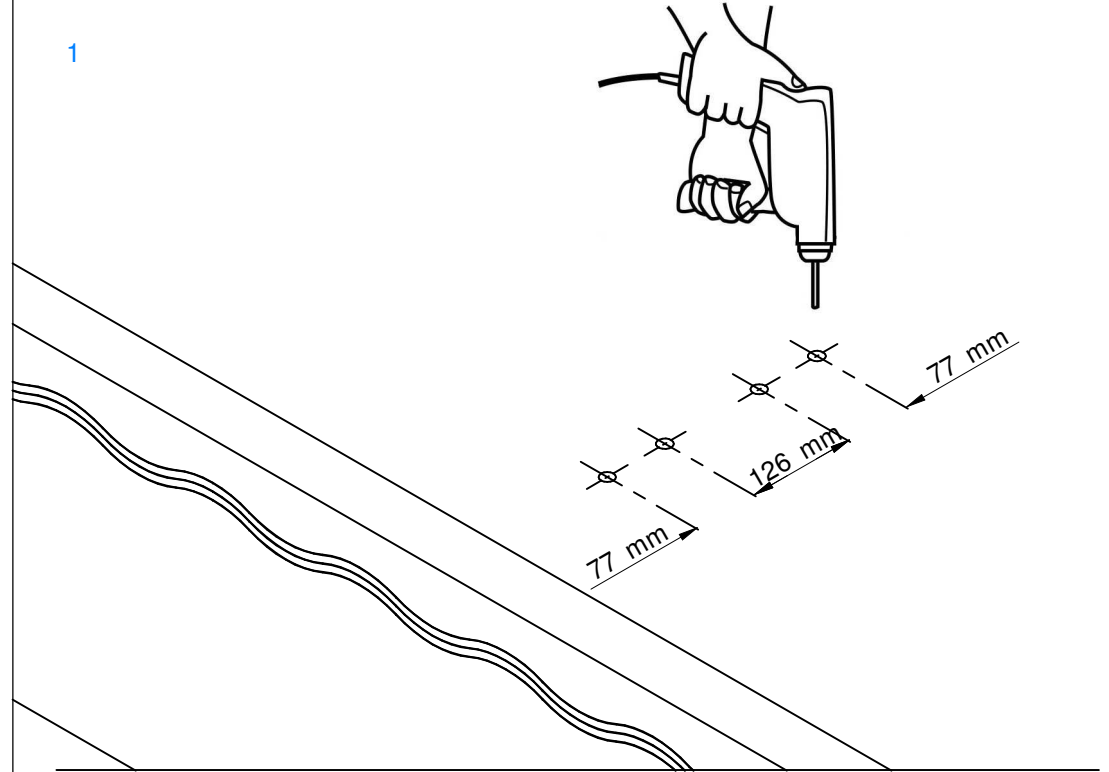

2

